Installation Instruction

(Toyota HiAce High Roof 2010+)

Precautions

- All pictures in the manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please carefully read the product manual before installation; When installing, protect your car's surface and avoid scratching.
- Please check regularly if all accessories connected with the car are loose to ensure safety.

Installation Steps

Refer to the parts list and accessroy drawings to check if the accessories are complete. After the product is installed, press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds. Tail gate learning is finished.



1.Remove the original car trim panel and brace rod.



2.Remove the left upper bracket and the brace rod of the original car, install our brackets and brace rods (the ball head towards out) and fixed with our special screws.



3.Remove the left lower bracket of the original car, install our left lower brackt and fixed it with our special screws.



Remove the right upper bracket and the brace rod of the original car, install our brackets and brace rods (the ball head towards out) and fixed with our special screws.



5.Remove the right lower bracket of the original car, install our left lower brackt and fixed it with our special screws.



6.Remove the original car waterproof rubber plug, the cable passes through the rubber plug.





7. After the cable passes through the waterproof rubber plug, route along the arrow to the tail gate.

8. Find the power supply under the passenger seat. Unplug the original car fuse and plug in our power outlet.




9. The power cord is routed to the tailgate along the yellow line.




10. Find the screws inside the circle at the tailgate and connect it with our ground wire.



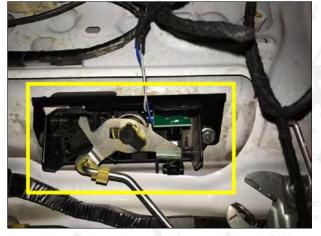


11.Remove the original car screws, install our brackets and fix them with the original car screws.

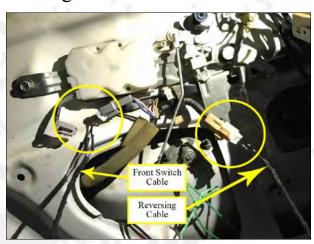



 
12.Unplug the original socket and plug in our front switch cable and reversing cable.





14. Remove the original car lock and install our lock.



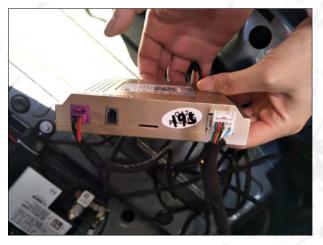

15. According to the color of the plug, insert the plug into the control box, and use our 3M paster on the back of the control box.



16.Use our screws to fix the control box.



17. Tied up the safety rope to avoid malfunction.



18. Punch the hole next to the tailgate electric suction lock, and then install our tailgate switch button.



19. Tailgate switch button.

After the installation is complete, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds "DI DI". Tail gate learing is finished.) If you do not hear two sounds, learning is unsuccessful and you need to re-learn. If you can not close the door, use your hand to push the door to close when you are learning.

Disclaimer

Due to improper installation and improper use, caused the relevant issues and losses, these not include within our company 's warranty. Thanks for your purchasing our products. Please read the manual carefully before use and collect it for later reference.

Key Control Method

- 1. Press the original Key fobs three times to open and close the door.
- 2. Press the front switch button to open and close the door.

Setting Height

- 1. Raise the tailgate to the ideal height;
- 2. Press the tailgate switch for 3-5s;
- 3. When you hear a long sound "Di——", loose your hand and press the tailgate switch again to close the door.
- 4. When you hear two sounds "Di Di", Setting height is finished.

Note: Do not close the door with your hands after setting the ideal height. Be sure to use our own tailgate switch.

Fault Solution

The original key fob does not work	Check if the yellow central control line is
A STATE OF THE STA	connected.
	1. Check if the positive power supply is
Not working after installation	connected with 12V-16V.
L. L. San	2.Check if the power fuse is inserted.
	3. Check if the ground wire is connected.
5 4	1. Check if the left and right bracket are installed
. 6. 1	reversed.
Closing the tailgate not in place	2.Check if the control box wire is inserted.
7 2	3. Check if the brackets are fixed with our
The tailgate can only open to half	screws.
	4. There are two rubbers on the left and right
	sides of the original tailgate cover. Check if
	they are loose and need to be tightened.